

Bain Marie Instructions



READ THESE WARNINGS FIRST

- Read all instructions before attempting to use this appliance.
- Any damaged cord or plug must be replaced only by a suitably qualified technician.
- This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Never touch heated surfaces. Use handles and knobs provided.
- Exercise extreme caution when moving any appliance containing a hot substance.
- Empty the contents of the appliance before attempting to lift or move it.
- Never immerse the appliance, cord or plug in water or any other liquid.
- Never operate an appliance with a damaged cord or plug.
- Always unplug the appliance from power when not in use and before cleaning.
- Do not allow to boil dry.
- Do not allow power cord to touch hot surfaces or hang over table or counter edge.
- Never place the appliance on or near a hot burner or in a heated oven.
- Always plug cord into power outlet before turning on any controls.
- Always turn off any controls before removing plug from power outlet.
- Never use appliance for any purpose other than its intended use.
- Never overfill the appliance.
- Beware of scalding steam when lifting bain mairé lids.



4 Bay Bain Marie

OPERATING INSTRUCTIONS

1. Place the appliance on a level surface (with sufficient strength to carry the weight when full) and within easy reach of power outlet.
2. Make sure there is enough room above the appliance to allow for filling trays.
3. Position the appliance to ensure easy and safe use.
4. $\frac{3}{4}$ Fill the bottom of the bain marie with fresh water and insert the trays. Keep an eye on the water level.
5. Plug the cord into the power outlet and switch on.
6. For maximum heating, turn the control knob to the highest position. A pilot light will signal that the appliance is on and is heating. When the water has reached the desired temperature, turn the control knob down a little to keep at a constant temperature. To re-heat the water or after adding cold water, turn the control knob back to maximum position.
7. When not in use, turn the control knob and power outlet switch off.
8. To clean, use fresh water and a clean cloth on the bain marie body. Bain marie trays can be washed using liquid detergent and hot water.
9. Do not use cleaning chemicals, scourers or pressurised water.

NOTE: Please place your food into the bain marie trays hot. Bain maries are not designed to heat food, only to keep it hot. You can use a bain marie tray for cooking in your oven if desired.

ADDITIONAL CHARGES APPLY FOR: CLEANING, DAMAGED, MISSING OR LOST EQUIPMENT.

Any additional charges are payable upon return.

Territory Events Hire trusts you will have an enjoyable and safe function with the use of our Bain Marie. If you do have any queries please call 08 8947 2198 during working hours.

107 Coonawarra Road, Winnellie NT 0820
T: 08 8947 2198 F: 08 8947 2329